



EV #	Description	Ref Part #	Quantity
-	Worm Gear Box Complete - Single Start (1 to 42)	3162 1663 82	1
-	Worm Gear Box Complete - Five Start (1 to 27)	3162 1663 80	1
1 & 2	Shaft Complete with Worm Gear - Single Start	3162 0475 80	1
1	Shaft only for Single Start	3162 0475 00	1
2	Worm Gear, Single Start (Bronze)	3162 0475 00	1
1a & 2a	Shaft Complete with Worm Gear - Five Start	3162 1667 80	1
1a	Shaft only for Five Start	3162 1667 00	1
2a	Worm Gear, Five Start (Bronze Repair)	3162 1667 00	1
3	Bolt	3162 0481 00	6
4	Spring Washer	WD 0022	6
5	Nut (Modified)*	WD 0023 (M)	6
7	Seal Ring	0666 4393 00	1
8	Sprocket	9718 3512 00	1
10	Cover	3162 0477 00	1
12	Screw	0147 1325 00	4
13	Shaft	3162 1551 00	2
14	Washer	3162 1581 00	4
15	Ball Bearing	0502 2229 00	4
16	Pulley Wheel	9718 3513 00	2
17	Spring Washer	0333 2130 00	2
18	Stop Screw	3162 0097 00	2
19	Worm Shaft, Single Start	9718 3507 00	1
19A	Worm Shaft, Five Start	3162 1664 00	1
20	Ball Bearing	0502 1110 00	1
21	Seal Ring	0666 4432 00	1
23	Gear Housing	3162 1663 00	1
24	Gasket	0653 1115 00	3
25	Plug	0686 3703 00	3
26	Ball Bearing	0502 2107 00	1
27	Cover	3162 0486 00	1
29	Screw	0147 1325 00	6
30	Ball Bearing	0502 1109 00	1
32	Nut	0266 1116 00	1
33	Ball Bearing	0504 2105 00	1
34	Washer	0301 2204 00	1
35	Split Pin	0111 1449 00	1
36	Nut	3162 0484 00	1
37	Cover	3162 0485 00	1
39	Screw	0147 1325 00	4
40	Bolt	3162 1068 00	1
41	Clamp	3162 1199 00	2
42	Circlip Int.	WD 0024	2

* Suffix "M" with the Ref. Part # is Modified